



SHARKSKIN
ULTRA SA®

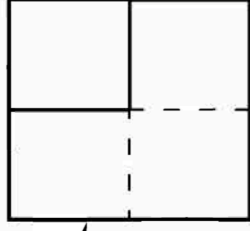

(BEFORE FOLDING, SCORE RELEASE PAPER
TO EXPOSE ADHESIVE AS SHOWN)

MECHANICALLY FASTEN AS NECESSARY IN
CORNERS THROUGH SHARKSKIN ULTRA SA®

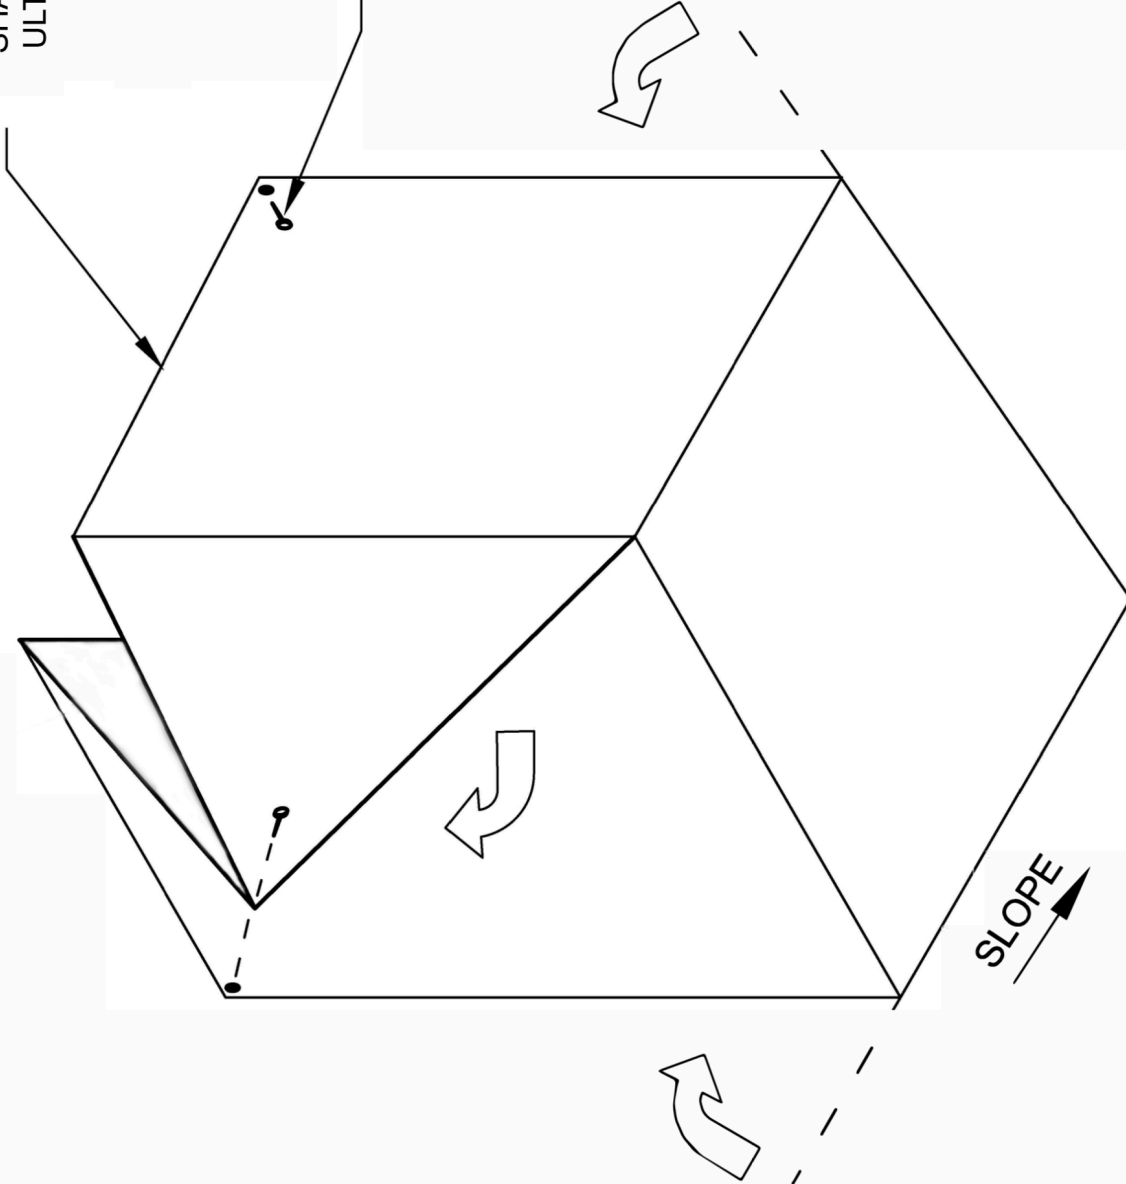

NOTES:

- A. VISIT WWW.SHARKSKINROOF.COM TO REVIEW THE COMPLETE LINE OF ROOF UNDERLAYMENTS, APPLICATIONS AND INSTALLATION INSTRUCTIONS
- B. USE SQUARE PIECE OF MEMBRANE (12" X 12" MINIMUM) FOR INSIDE CORNER
- C. FOLD AS SHOWN BY ARROWS
- D. ANGLE OF CORNER MAY VARY, ADJUST FOLDING OF THE MEMBRANE ACCORDINGLY TO FIT TIGHTLY TO CORNER
- E. INSTALL SHARKSKIN ULTRA SA TO FORM WATER SHEDDING LAPS
- F. INSTALL FLASHING AND ROOFING PER MANUFACTURERS RECOMMENDATION

Drawing: SSUSA - 10
Scale: Not to Scale
Created: 02/24/2019
Supersedes: 07/23/2014

INSIDE CORNER
WALL TO DECK

SHARKSKIN ULTRA SA® - ALL WEATHER BARRIER

KIRSCH
BUILDING PRODUCTS